



Advancing Water Heat Pump Technology

SINCE 1980



Econergy[®]

The smarter way to heat water[™]

HP4000LT Heat Pump Water Heater User Manual

IMPORTANT

A warranty registration/installation declaration form is enclosed separately for installer to complete and return. A copy of this information is to be completed by installer on the back of this manual.

Please read and retain this manual in a safe place.

Service Phone: **0800 33 66 33**

Service Agents: **www.econergy.co.nz**

Contents

- Important Information 5**
 - About your new Econergy® Heat Pump Water Heater 5
 - Installing your Econergy® Heat Pump Water Heater..... 5
- Heat Pump Operation 7**
 - Operating your Econergy® Heat Pump Water Heater..... 7
 - Normal Operation..... 7
 - Solar Mode 8
- App Setup and Connection Guide 9**
 - Before You Begin..... 9
 - Step 1 – Install App..... 9
 - Step 2 – Connect to Heat Pump 9
 - Step 3 – Connect to WiFi 10
 - Step 4 – Confirm Connection 10
 - Step 5 – Access Temperature Settings 10
 - Step 6 – Firmware Update..... 10
 - Step 7 – Factory Reset..... 11
 - Downloading Events 11
 - Support 11
- Maintenance..... 12**
 - Maintaining your Econergy® Heat Pump Water Heater 12
 - Going Away..... 12
- Troubleshooting 13**
- Econergy® HP Series Water Heater Specifications..... 15**
- Heat Pump Water Heater – Six Year Warranty Information 17**
 - Warranty Service Exceptions..... 17
 - Warranty Exclusions..... 17
- Warranty Registration Installation Declaration 18**

Important Information

- This product has a classification of 6.101 for appliances not accessible to the general public.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children shall be supervised to ensure they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent.
- The fuse on the electronic controller is 6A/250V. This should only be replaced by a qualified electrical service technician or electrician.
- Warranty and Support—All Econergy Water Heaters are backed by our Auckland factory with a 3 year warranty. Warranty does not apply in areas with corrosive or hard water unless water softener fitted.

About your new Econergy® Heat Pump Water Heater

Congratulations on purchasing an Econergy® HP4000LT heat pump water heater. Designed to our specifications, the HP4000LT heat pump water heaters are being recognised as the best water heating option for your home.

Econergy® heat pump water heaters slash your water heating bill by transferring free renewable energy in the air to heat your hot water. Not only will this save you money while giving you a reliable supply of hot water, by reducing power consumption you will also be doing your bit for our environment. The Econergy® heat pump water heater uses electricity to drive a heat pump cycle, which takes the energy in the surrounding air and transfers it into the water. The process is quite similar to how a refrigerator or air conditioning unit operates, except the technology has been optimised to produce a steady supply of reliable hot water at minimum cost.

Installing your Econergy® Heat Pump Water Heater

While installation of an Econergy® unit is a straightforward plumbing and electrical job, installation of your Econergy® heat pump water heater is best carried out by Econergy trained, trade certified plumbers and registered electricians in accordance with detailed installation instructions supplied from the factory. This ensures that you will get the best possible performance from your heat pump water heater, irrespective of whether the unit is installed in a new or existing dwelling. It also means you will enjoy the protection of a factory-backed three year parts and labour warranty (refer to page 14 for terms and conditions).

In existing homes Econergy® heat pump water heaters can be conveniently retrofitted to your existing electric hot water cylinder where the cylinder is post-1988 and in good condition.


For best performance, the Econergy® heat pump water heater can be connected to an Econergy® duplex stainless steel heat pump ready hot water cylinder. This will ensure the last few percent savings are achieved and ensure the longest service life of the total system.

Heat Pump Operation

Operating your Econergy® Heat Pump Water Heater

Your heat pump water heater is supplied with a status indicator and electric backup unit as shown in the diagram below.

This small grey box is located adjacent to the hot water cylinder. It informs the user of the status of the heat pump unit and allows the element to be manually switched on if required for any reason.

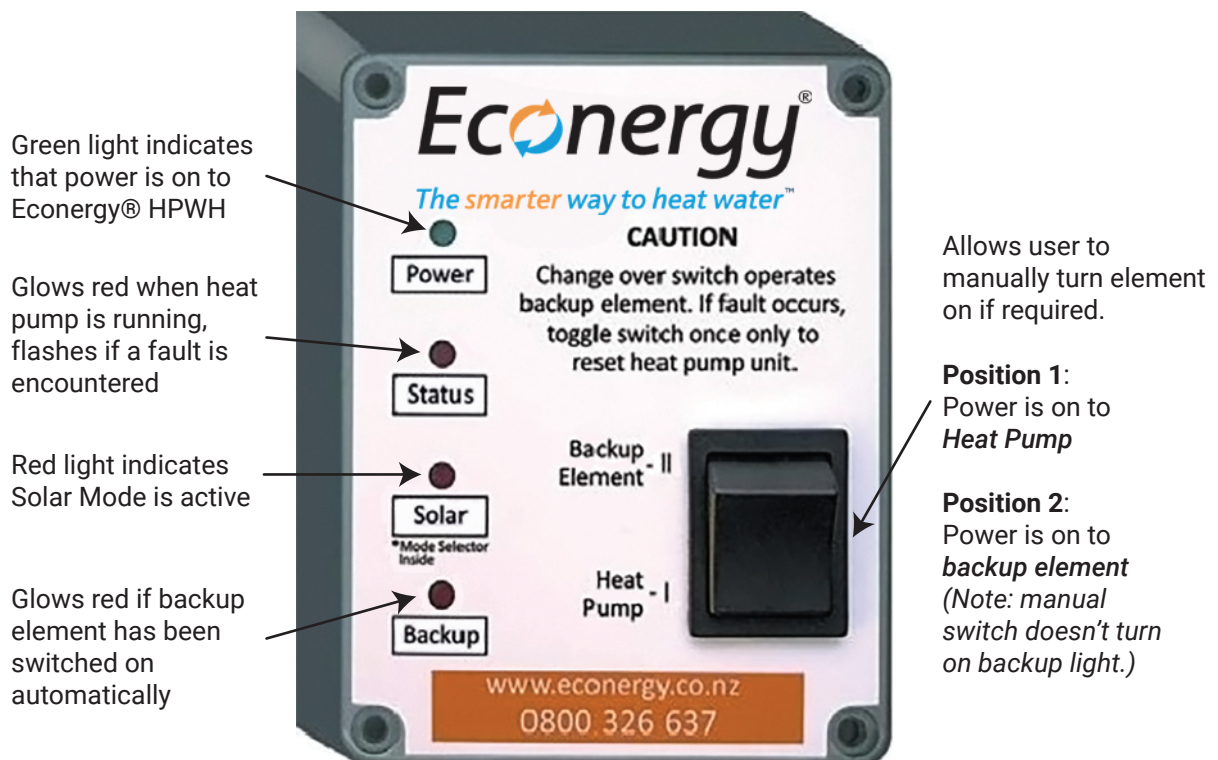

Normal Operation

Under normal operation the main power switch (usually a white 20 amp rocker switch located next to the hot water cylinder), and the outdoor switch next to the heat pump unit must be turned on. The two ball valves on the hot water cylinder (on the lines going to and from the heat pump) must be open to allow water to circulate to and from the heat pump water heater.

- If power is on to the hot water circuit, the **Power** light on the Status Indicator (shown on above) will be glowing green.

Note: If the power light is not glowing, the power to the hot water circuit may have been turned off by the power supply authority, this can happen up to 7 hours per day and is perfectly normal.

- The **Status** light will be off when the HPWH is not running.
- When the water temperature in the bottom of the tank gets below the pre-set cut-in temperature, by natural heat loss or from running off hot water, the heat pump will start running.
- The **Status** light will glow solid red while the heat pump is running.
- When the whole hot water cylinder is heated and hot water is being drawn back to the at pump unit, the heat pump unit and the **Status** light will switch off until heating is required again.
- If the ambient temperature drops below -3°C for a period of time then the hot water element and **Backup** light will glow red. The hot water element and **Backup** light will turn off once the ambient temperature rises above -3°C .

Solar Mode

Solar Mode is a software time-clock function designed to optimise heat pump operation when used with photovoltaic (PV) solar power systems.

During specified daylight hours, the heat pump uses the lower tank sensor for normal operation, allowing a full cylinder reheat. Outside of these timed hours, the upper tank sensor is used.

When the available hot water at the top of the cylinder becomes low, the heat pump will operate for up to one hour, or until the upper sensor set-point is reached. This ensures a reserve supply of hot water is available in the morning.

Note: *Solar Mode is only compatible with two-sensor systems.*

App Setup and Connection Guide

Control and monitor your heat pump directly from your smart phone using the **Hot Water Heat Pump App**.


Before You Begin

- Ensure **Bluetooth is turned ON** on your phone
- Ensure **WiFi is turned ON** on your phone
- Make sure there is a **strong WiFi signal near the heat pump**

Because Bluetooth has a shorter range than WiFi, you **should stand close to the heat pump during setup**.

Step 1 – Install the App

Download the **Hot Water Heat Pump App** from:



Search for: **Hot Water Heat Pump**

Step 2 – Connect to the Heat Pump


1. Open the **Hot Water Heat Pump App**
2. Press the **+** icon in the top right corner
3. The device **HWHP******* should appear
4. Select the device
5. Press **Next**

Step 3 – Connect to WiFi

1. Select your **local WiFi network**
2. Enter your **WiFi password**
3. Press **Next**

Step 4 – Confirm Connection

On the **App Main Page**, you should see the unit displayed.

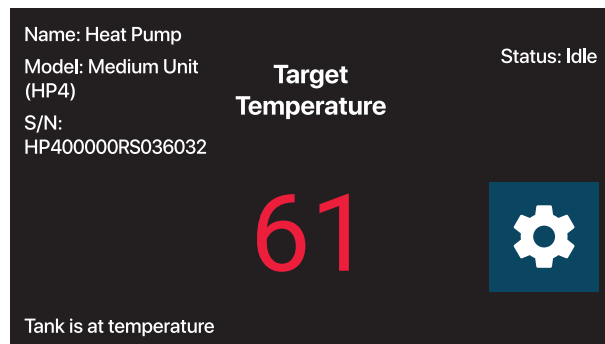

Step 5 – Access Temperature Settings

1. Press Target Temperature
2. This will open the control page

Step 6 – Firmware Update

Before operating the system, perform a Firmware Update.

1. Select **Firmware Update**
2. Follow the prompts
3. The app will show an image of the heat pump to confirm the **correct software selection**



Important: If the incorrect firmware is selected, the unit will show an error. No damage will occur, but the firmware update process must be repeated.

Step 7 – Factory Reset

After completing the firmware update:

1. Select Factory Reset
2. Allow the unit to complete the reset process.

Downloading Event Logs


If requested, event logs can be exported from the App.

Export Event Logs

1. Select **Export Raw Data**
2. Email the file to: info@waterheating.co.nz

Export Raw Data

1. Select **Export Raw Data**
2. Email the file to: info@waterheating.co.nz

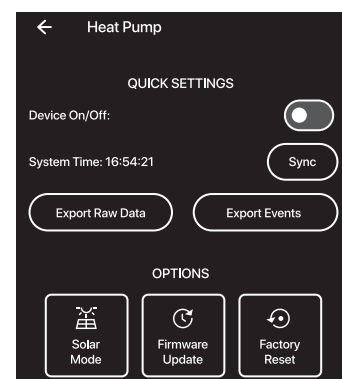

Support

If you experience any issues during setup or connection, please contact Hot Water Heat Pumps Ltd – info@waterheating.co.nz.

Maintenance

Maintaining your Econergy® Heat Pump Water Heater

Looking after your Econergy® heat pump water heater is a relatively straightforward job. We recommend the following guidelines be followed:

- Keep the air inlet and outlet (black louvre and grey rear grille) clear of obstructions within a 400mm distance.
- Do not place objects on top of the outdoor unit or stand on it.
- Switch off and cover the unit temporarily if mowing or edge trimming next to the unit, to avoid debris entering the unit.
- Ensure the condensate drain tray is kept clear of debris.
- In coastal areas we recommend coating the unit with a protective coating. This can be supplied from the factory or by your authorised Econergy® agent.
- Every 12 months, switch off the unit at the wall and wash the unit with soapy water. The finned evaporator (bluish colour behind rear grille) can be cleaned by spraying a garden hose in between the fins.

Note: *The unit MUST be switched off at the wall during any cleaning with water.*

Going Away

If going away for an extended period of time, the Econergy® water heater can be turned off by turning the main isolating power switch off (located adjacent to the hot water cylinder but not to be confused with the hot water back up box pictured on page 7). Upon returning, the main white power switch is simply turned on again and the unit resumes operation automatically.

Note: *There may be a time delay up to eight minutes until the unit starts heating.*

Troubleshooting

If abnormal operation occurs with your Econergy® heat pump water heater, please read the following table to see what action (if any) is required.

If there is no hot water, remember **that if the unit is connected to a ripple supply, or night rate supply, the power company can turn off your hot water supply for up to 7 hours per day!**

If the power company is turning off the supply for more than 7 hours per day, or there is a fault with your ripple control relay, please contact your local power company for service.

If an unrecoverable fault occurs with your Econergy® heat pump unit, then the status light will flash on and off and an audible alarm will sound. Before calling your local sales and service agent (refer www.econergy.co.nz for contact details) or the Econergy® Service team (0800 33 66 33), please check the following:

Fault	Possible Cause	Things to Check
No Hot Water, but heat pump still running.	Whole tank has been drawn off.	Estimate water flow volume being used (a bucket under the shower head will suffice) and if approximately equal to tank capacity then tank is being dumped. Reduce shower flow or water usage, or install larger storage hot water cylinder.
	Heat Pump has lost refrigerant charge.	Alarm will sound after several unsuccessful attempts to heat water. Switch changeover switch to position II (Backup element). Call local service agent www.econergy.co.nz or 0800 33 66 33.
No Hot Water, lights off on status indicator.	No power to hot water cylinder.	Check all switches are on, there is power to house and circuit breaker marked "Hot Water" is ON.
	Ripple control activated.	Wait several hours until peak load time is over. If ripple remains out, contact power company to address the problem. If hot water is immediately required contact electrician to override ripple control.

Fault	Possible Cause	Things to Check
Water temperature too low.	Temperature valve set incorrectly or malfunctioning	Remove cap from top of tempering valve and screw in to increase water temperature. Call plumbing installer if temperature fluctuating or too low.
	Partial loss of refrigerant or other sealed system malfunction.	Call local sales and service agent (see www.econergy.co.nz or 0800 33 66 33).
Hot Water supply OK but alarm buzzer operating and status light flashing.	Unit fault has occurred and element is on.	Reset heat pump unit by switching main (white) switch off and on again. Green light should be lit and unit should start heating again normally. Check that ball valves are open. If fault occurs twice in succession, switch changeover switch to position II (backup) and call sales and service agent (refer www.econergy.co.nz or 0800 33 66 33).
Heat Pump is not running, status light off and backup light is on.	Ambient temperature below -4°C.	No action required. Wait until temperature rises above -4°C and heat pump operation will recommence.
Water is dripping from rear of unit (behind finned evaporator).	This is normal as the unit will remove moisture in the air above 70% RH (relative humidity).	No action required.

Econergy® HP Series Water Heater Specifications

General	HP4000LT
Height	520mm
Width	490mm
Depth	550mm
Weight	50kg
Noise rating @ 1.5m	52 dBA
Circuit Breaker	16 amps
Rated Current RLA	4 amps
Refrigerant	R134A
Refrigerant Quantity	580gm
Ambient Air Temperature	-5°C – 40°C

Performance Specifications*	HP4000LT
Heat output	3600W
Rated input	1000W
Recovery rate	67L/hr
Efficiency (COP)	3.8W/W

Water/Connections	HP4000LT
Min Supply Pressure	50kPa
Max Supply Pressure	800kPa
Min/Max Inlet Water Temperature	5°C – 50°C

Water/Connections	HP400LT
Flow/Return Connections	RP½"/15mm
Condensate Drain	15mm
Max Total Dissolved Solids	250mg/L
Max Saturation Index	+0.80
Zone 1	3–8 people
Zone 2	2–6 people

*Rated at EN255 Conditions (15°C/15°C/60°C/70°C) (Cold Water/Ambient Air/Hot Water/70%RH).

Heat Pump Water Heater –Six Year Warranty Information

Congratulations on your purchase of a quality Econergy® heat pump water heater. Econergy has a limited 6-year residential warranty on parts which operates concurrently with the 6-year performance guarantee from the date of installation if the unit has been certified as correctly installed and commissioned to the current version of the Econergy installation manual by a suitable qualified installer.

The sealed refrigerant system including the compressor and the expansion device, have a 6-year parts warranty, including the water system and electronics.

The comprehensive labour warranty is for 3-years. To be able to claim against this warranty, the owner must send a completed **Installation Declaration Form**, supplied with this manual upon completion of installation to:

Hot Water Heat Pumps Ltd, PO Box 21586, Henderson, Auckland 0650
or email: info@waterheating.co.nz

Warranty Service Exceptions

1. Travelling costs for repairs in excess of one hour's drive from the service agent's designated place of business.
2. Consequential loss arising from failure of the product.
3. Additional cost of access to the unit, where it has been installed in an unusual location.
4. Vandalism, accident or Acts of God.

Warranty Exclusions

1. Defects or failures due to incorrect or faulty installation. Please read the installation instructions in the installation manual and ensure these are followed.
2. Defects or failure of the heat exchanger caused by hard or corrosive water.
3. Defects or failure caused by blockage of the unit due to foreign material such as dust or debris, e.g. dog hair, grass, moss, etc.
4. Damage to equipment caused by accessory or component used that is not specified by Econergy®.
5. Inadequate electrical supply, voltage fluctuations, incorrect external wiring.
6. The product has been relocated to another property.
7. If the heat pump has not been serviced in a three year period.

This warranty is applicable only in New Zealand. For overseas warranty, please refer to International Equipment Warranty.

Warranty Registration Installation Declaration

Installer to complete for customer warranty record

Owner's Name

Product Serial Number

Installation Date

Installation Address

Declaration: I have installed and commissioned this Econergy Water Heater at the above address in compliance with the manufacturer's instruction manual.

COC Number

Installer Company Name/Trading Name

Installer Name

Installer Email Address

Signed

Date

Secondary Installer Company Name/Trading Name

Secondary Installer Name (Electrician or Plumber)

Secondary Installer Email Address

Signed

Date

0800 33 66 33 • www.waterheating.co.nz • info@waterheating.co.nz

3 Corban Avenue, Henderson, Auckland 0612 • PO Box 21586, Henderson, Auckland 0650





HOT WATER HEAT PUMPS LTD

Advancing Water Heat Pump Technology

SINCE 1980